

Eagle Mat & Floor Products, Inc. 932 Hungerford Drive, Suite # 37-B Rockville, MD 20850

Office: (301) 762-2000 Fax: (301) 762-2477 http://www.eaglemat.com


HOW TO PUT TOGETHER TURTLE TILES Tools needed: Rubber Mallet, Utility Knife

There are two (2) "T" tabs (Male) on two sides of the tile and two (2) flat (Female) sides of the tile.

Orient the tiles so that all of the tabs are facing the same direction.

For example all tabs should be facing east and south.


Put your first tile down where you want to start your floor, take the next tile and place the female (west side of the first tile) down on top of the male tabs (east side) and connect the two tiles together (use the rubber mallet to tap into place). Continue doing this for as many linear feet as you need.

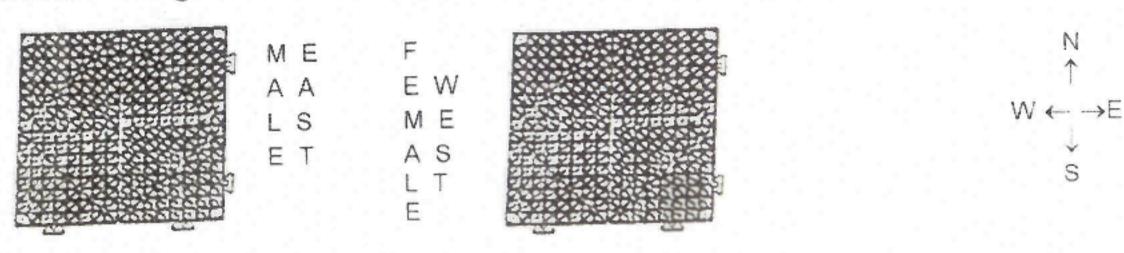

For the second row - go back to the first tile that you put down. Take a tile and put the female (north side) of the tile down on top of the male tab (south side) of the first tile. Continue doing this until you have completed the second row.


Repeat this process until you have as many rows as you need. For large areas, we suggest you make up sections of five tiles with tabs facing the same two directions. Attach the sections. You can trim the tiles with a utility knife if necessary to fit around obstructions.

FEMALE

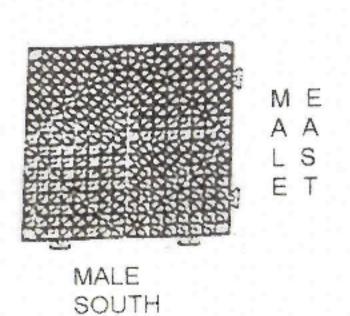



NORTH

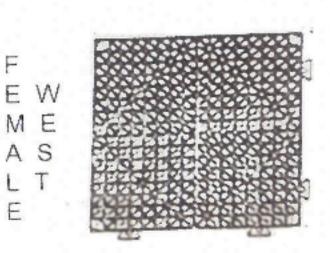

Installation:

