

Installation Instructions

Clear Corner Guards

FIG. 1


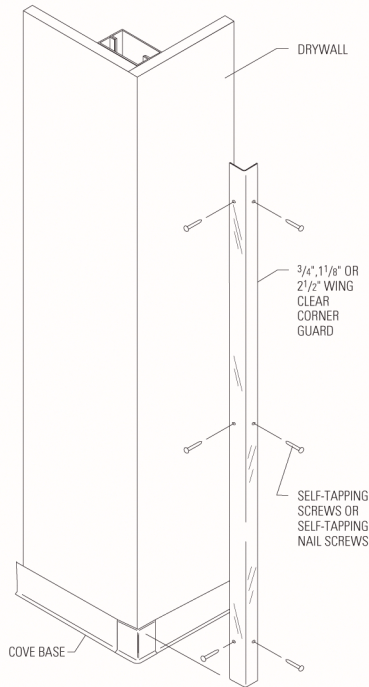


FIG. 2

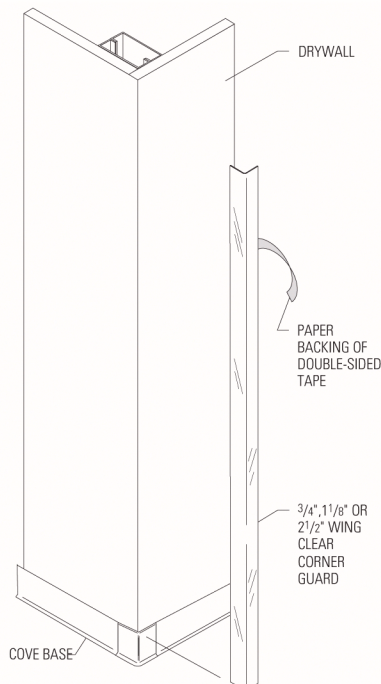

Please read all instructions before installing corner guards. Material must be stored, installed and used in environmentally controlled conditions.

1. Allow corner guards to reach room temperature before installing. The wall surface that the corner guards are to be applied must be dry and free of dirt, dust, oil loose pain, wax and grease.
2. **SCREW-IN/NAIL-IN INSTALLATION**
Attach corner guard to wall with provided hardware. Corner guards are supplied with pre-drilled holes and self-tapping screws. The $\frac{3}{4}$ " (19mm) wing size corner guards are supplied with self-tapping nail screws. To secure a $\frac{3}{4}$ " (19mm) wing size corner guard with nail screws, hammer the nail screw through the corner guard and into the wall. See Figure 1.
3. **SELF-ADHESIVE INSTALLATION**
Peel the paper release backing from the corner guard. Starting at the bottom, position the corner guard on the wall. Apply firm pressure to the entire surface of the corner guard to ensure a firm bond. An extension roller will aid this step. See Figure 2.

Note: Self-adhesive corner guards are not recommended to be installed in heavy traffic areas or on non-porous, non-smooth, or difficult surfaces, such as glazed block, vinyl wallcovering or wall paper.