


Installation Instructions

Clear Wall Guard


FIG. 1

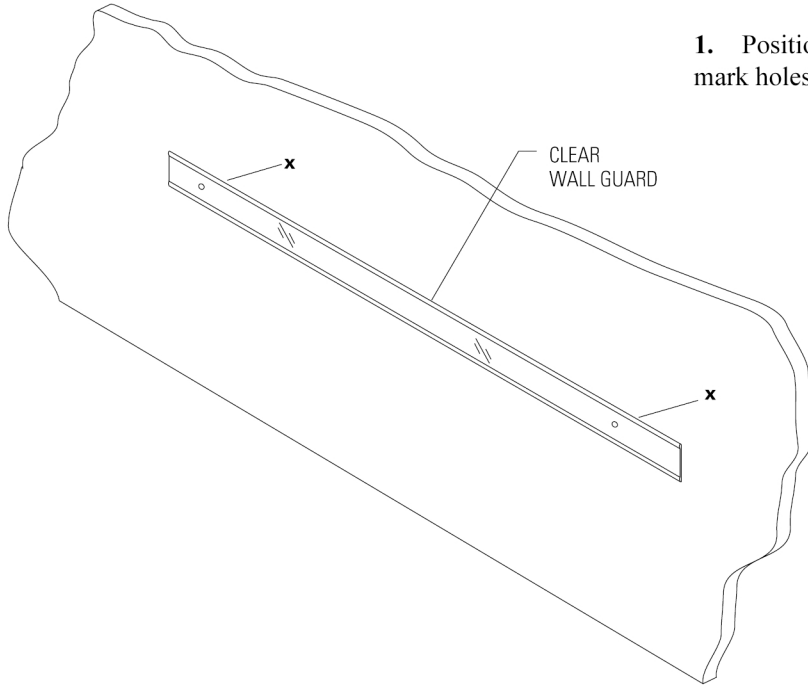

Please read all instructions before installing wall guard.

1. Position wall guard on wall at desired height. Level and mark holes. See Figure 1.

FIG. 2

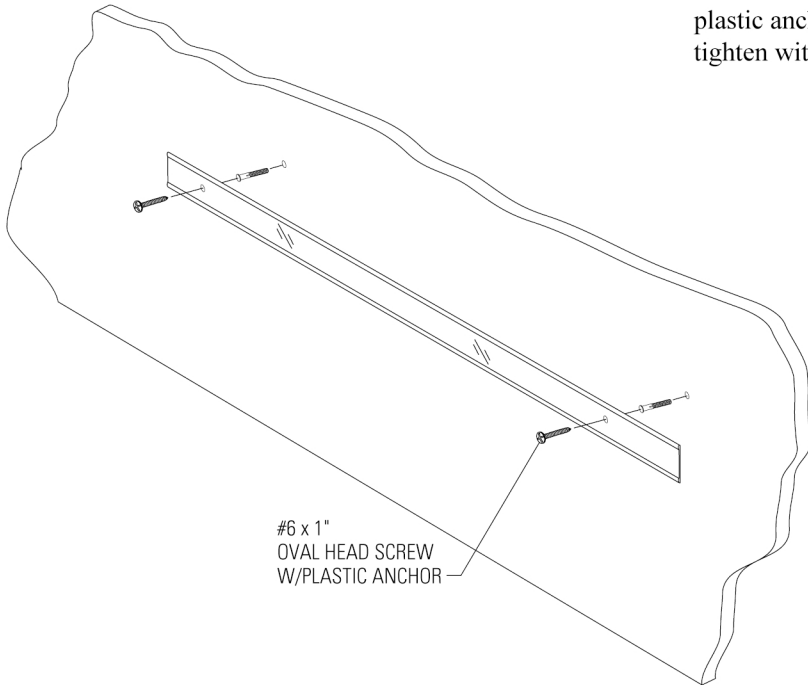

2. Drill marked holes on wall using a 3/16" drill bit. Push a plastic anchor into each hole. Mount wall guard on wall and tighten with provided screws to secure.



932 Hungerford Dr. #37B
Rockville, MD 20850
1-877-333-1018

www.eaglemat.com