


# Installation Instructions


## 1200/1255/G2-1200 Handrail

FIG. 1

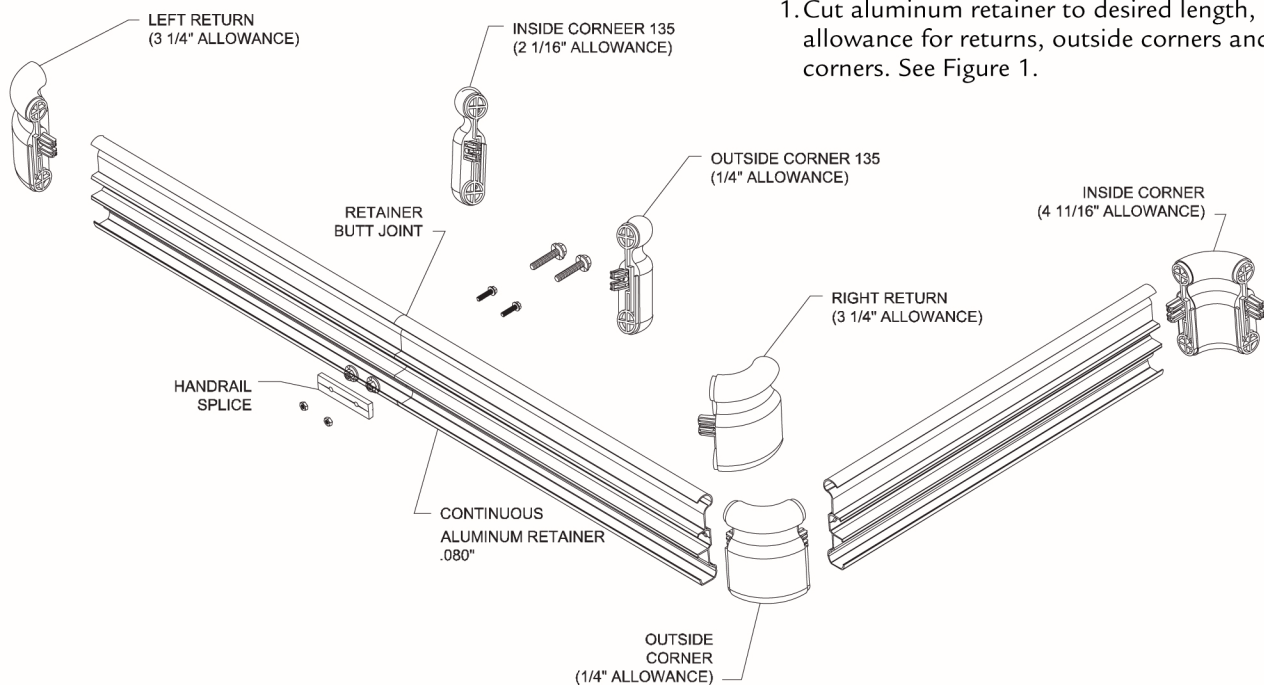

1. Cut aluminum retainer to desired length, leaving allowance for returns, outside corners and inside corners. See Figure 1.

FIG. 2

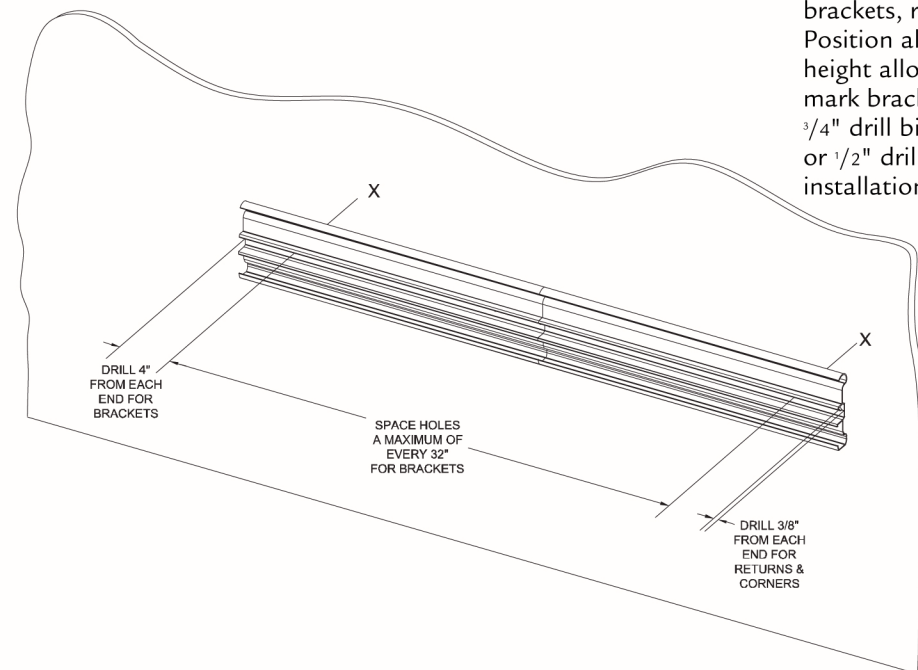

2. Drill holes in centerline of aluminum retainer for brackets, returns and corners using 1/4" drill bit. Position aluminum retainer against wall at desired height allowing for returns and corners. Level and mark bracket holes on wall. Drill marked holes with 3/4" drill bit for toggle bolts (drywall installation) or 1/2" drill bit for lead anchor (concrete wall installation). See Figure 2.



**EAGLE MAT**  
& FLOOR PRODUCTS

932 Hungerford Dr. #37B  
Rockville, MD 20850  
1-877-333-1018

[www.eaglemat.com](http://www.eaglemat.com)

# Installation Instructions

## 1200/1255/G2-1200 Handrail

FIG. 3

3. Attach returns and corners to retainer leaving a  $\frac{1}{16}$ " gap between returns/corners and retainer to allow for adjustment. Loosely attach brackets to retainer. Mount on wall, level retainer and tighten screws to secure. See Figure 3.


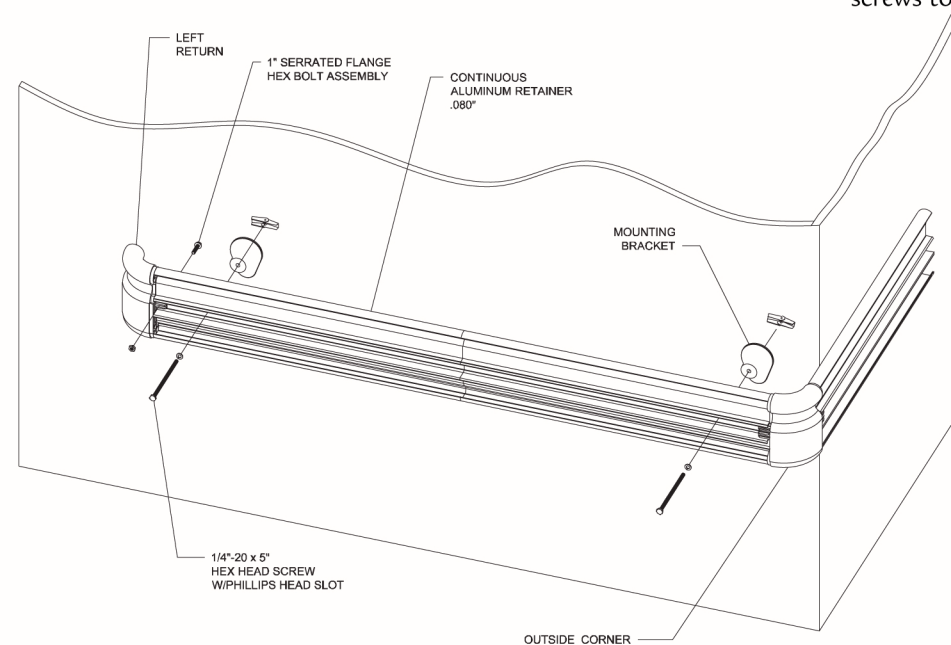


FIG. 4

4. Cut cover to length between returns and/or corners. (Note: Trim factory edges square before installation). Position cover on retainer and adjust returns and/or corners for a tight fit. Snap cover on retainer by starting at top and pivoting over the bottom of retainer. See Figure 4.



NOTE: For 1255 Only - When continuous runs are over 12', covers should be installed in consecutive order using the numbers found on the back of covers. This ensures proper alignment of accent strip.

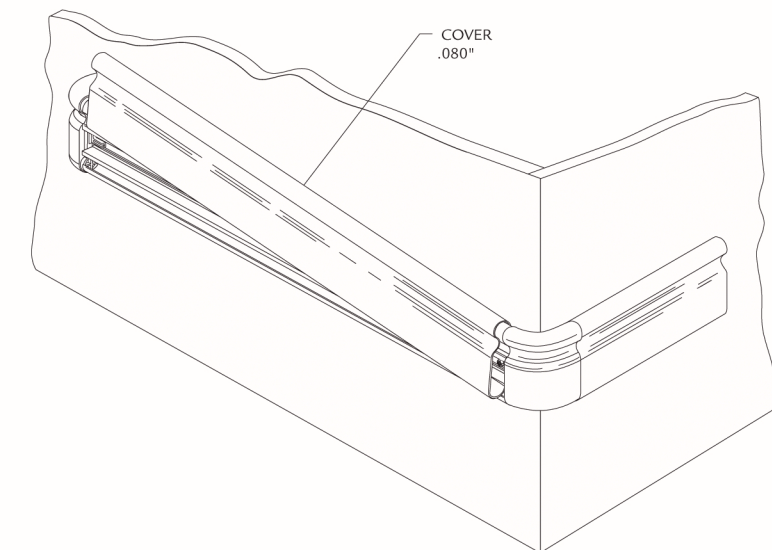

**EAGLE MAT**  
& FLOOR PRODUCTS

932 Hungerford Dr. #37B  
Rockville, MD 20850  
1-877-333-1018

[www.eaglemat.com](http://www.eaglemat.com)